


SETUP INSTRUCTIONS FOR 84" TO 100" BAR

NOTES


STEP 1

LAY DOWN THE BAR'S 4 FRONT PANELS AS SHOWN. THE LABELS ARE ALSO SHOWN ON THE DIAGRAM TO THE RIGHT. YOUR WORK NEEDS TO MATCH WHAT IS SHOWN.

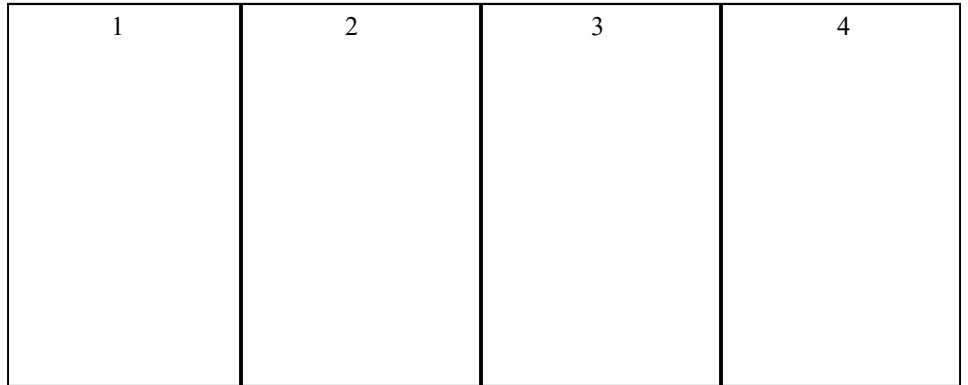

STEP 2


INSTALL THE BAR'S 4 SUPPORTING RAILS AS SHOWN (T1, T2, B1, B2). USE THE 1.25" SCREWS AND ATTACH TO THE PREDRILLED HOLES.

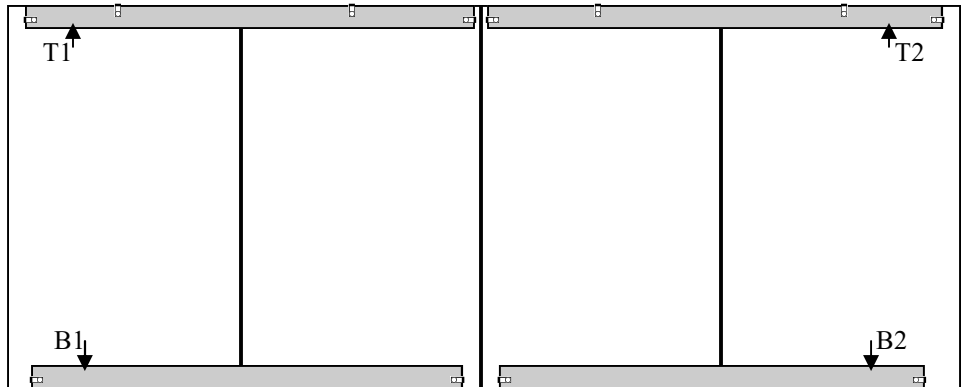

STEP 3


INSTALL THE BAR'S 3 SUPPORTING PANELS (S1, S2, S3). USE THE 3/4" SCREWS AND ATTACH TO THE PREDRILLED HOLES.

NOTE: IF YOU REQUESTED YOUR SHELVES TO BE ON ONE SIDE VS. THE OTHER, YOUR S1 AND S3 MAY BE REVERSED, BUT FOLLOW THE SAME PROCEDURE AS SHOWN,

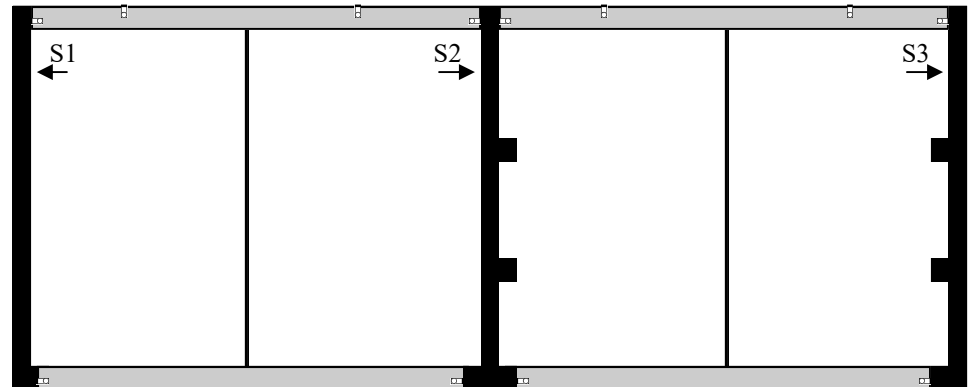

STEP 4

STAND THE BAR UP, AND SLIDE IN THE PROVIDED SHELVES.

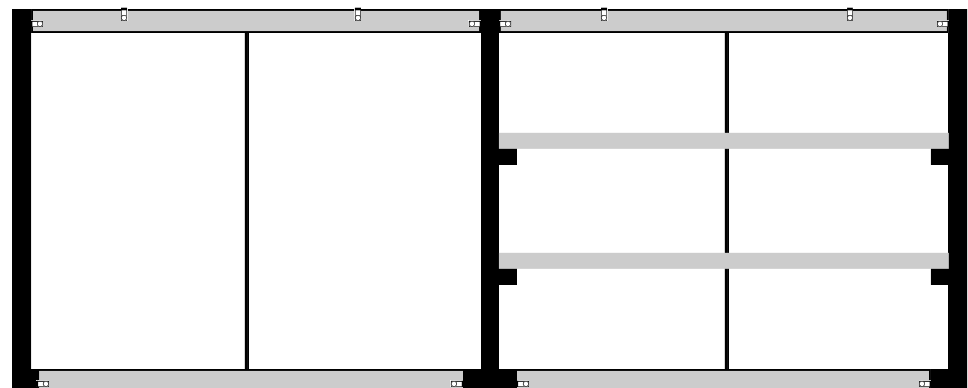



SETUP INSTRUCTIONS FOR 84" TO 100" BAR

STEP 5

INSTALL THE BAR TOP. USE THE 3/4" SCREWS AND CONNECT TO THE PREDRILLED HOLES. USE CONNECTION POINTS ON PANEL S2 FIRST, BEFORE DOING THE BAR ENDS. USE THE PROVIDED MENDING PLATE AND 3/4" SCREWS TO SECURE THE 2 TOP SECTIONS TOGETHER AT THE FRONT CENTER OF THE BAR. BACK OF BAR TOP IS FLUSH WITH FRAME

BAR TOP (R)

BAR TOP (L)

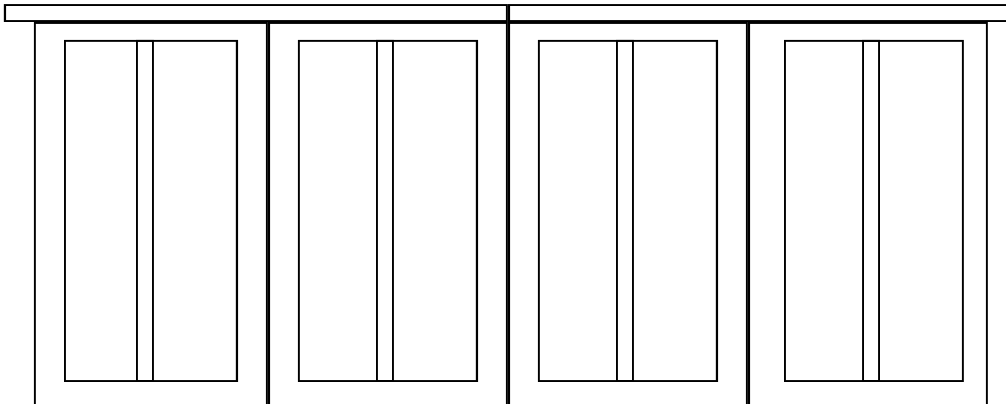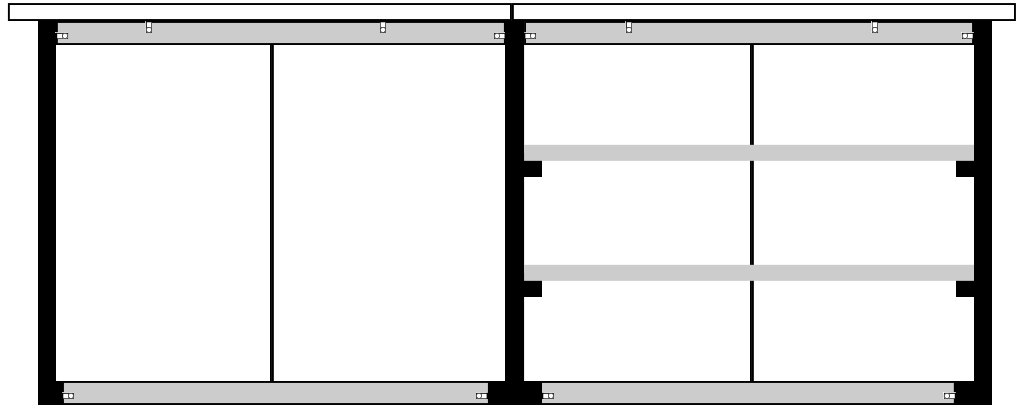

NOTES

