



# SETUP INSTRUCTIONS FOR 104" TO 125" BAR

## NOTES


**STEP 1**  
LAY DOWN THE BAR'S 5 FRONT PANELS AS SHOWN. THE LABELS ARE ALSO SHOWN ON THE DIAGRAM TO THE RIGHT. YOUR WORK NEEDS TO MATCH WHAT IS SHOWN. THE LABELS 'D' SHOULD BE FACING THE FLOOR. ALL ELSE SHOULD BE FACING UP.

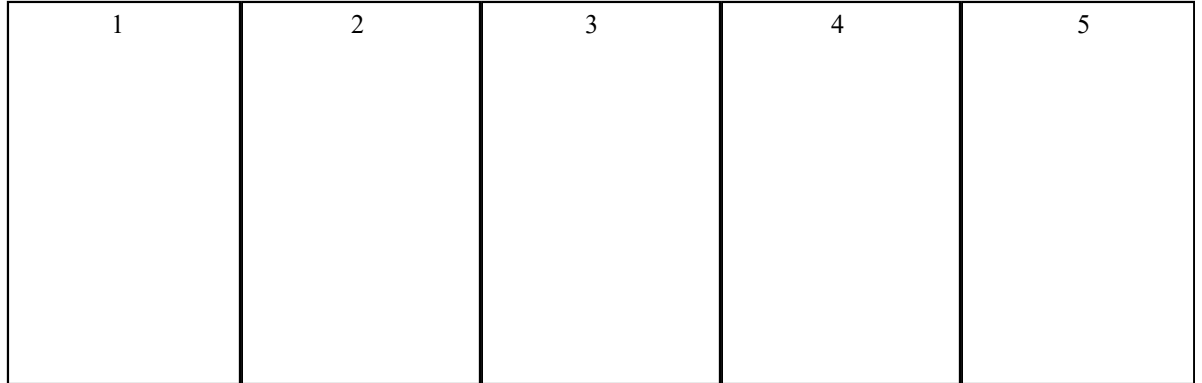


**STEP 2**  
INSTALL THE BAR'S 6 SUPPORTING RAILS AS SHOWN (T1, T2, T3, B1, B2, B3). USE 1.25" SCREWS AND ATTACH TO PREDRILLED HOLES.

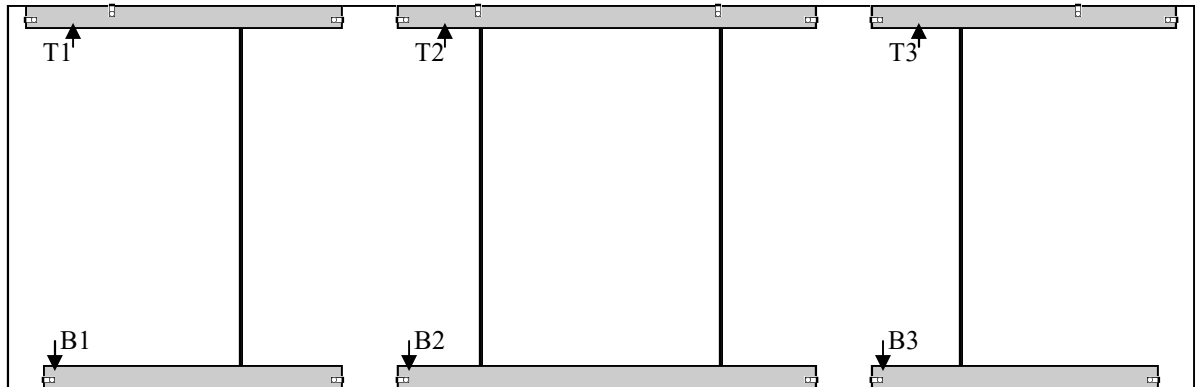

**STEP 3**  
INSTALL THE BAR'S 4 SUPPORTING PANELS (S1, S2, S3, S4). USE 3/4" AND ATTACH TO PREDRILLED HOLES

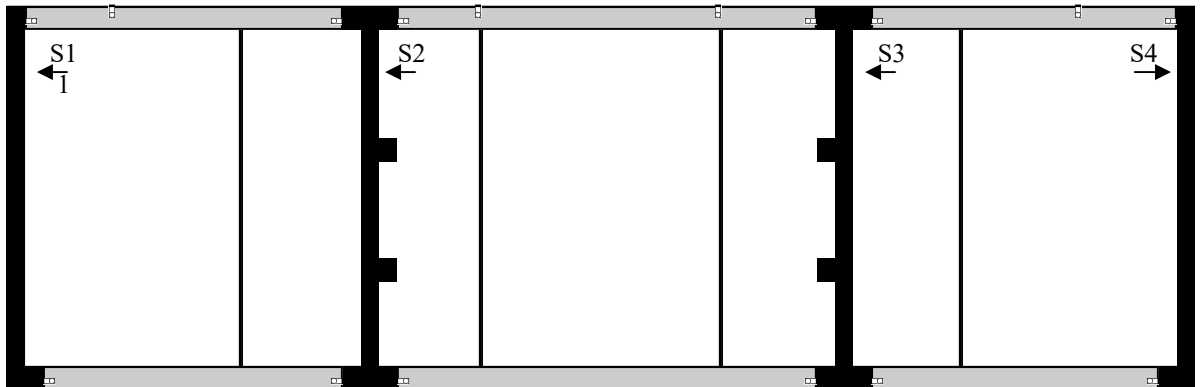


**STEP 4**  
STAND THE BAR UP, AND SLIDE IN THE PROVIDED SHELVES.

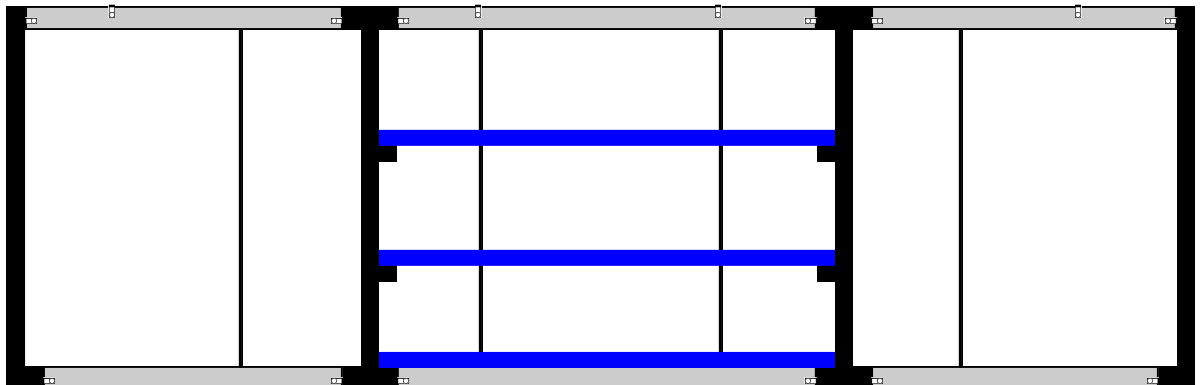

## SETUP INSTRUCTIONS FOR 104" TO 125" BAR

### STEP 5

INSTALL THE BAR TOP. USE 3/4" SCREWS AND INSTALL TO PREDRILLED HOLES. USE THE PROVIDED MENDING PLATES TO SECURE THE 2 TOP SECTIONS TOGETHER AT THE FRONT CENTER OF THE BAR USING 3/4" SCREWS. BACK OF BAR TOP IS FLUSH WITH FRAME

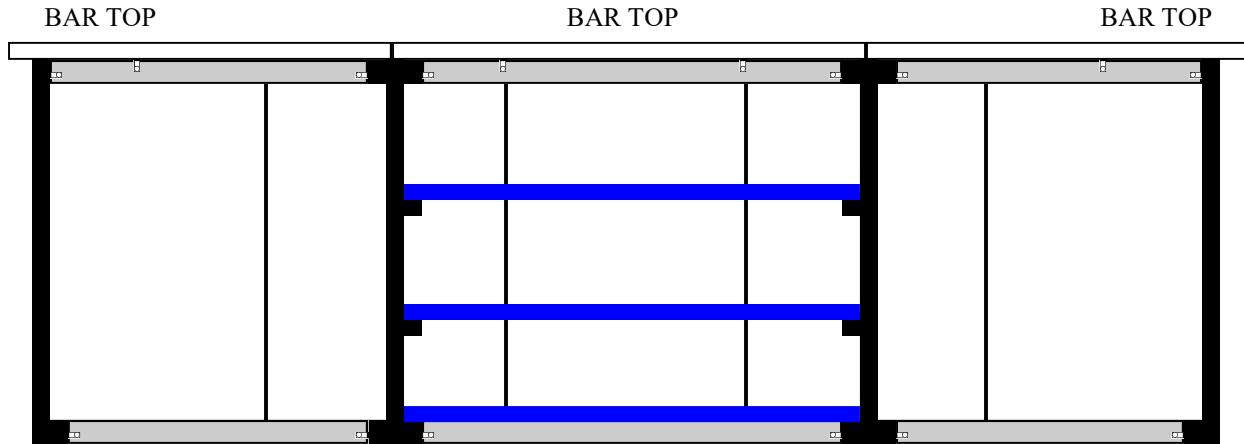

NOTES