


## SETUP INSTRUCTIONS FOR 60" TO 80" BAR

NOTES


### STEP 1

LAY DOWN THE BAR'S 3 FRONT PANELS AS SHOWN. THE LABELS ARE ALSO SHOWN ON THE DIAGRAM TO THE RIGHT. YOUR WORK NEEDS TO MATCH WHAT IS SHOWN. THE LABELS 'D' SHOULD BE FACING THE FLOOR. ALL ELSE SHOULD BE FACING UP.

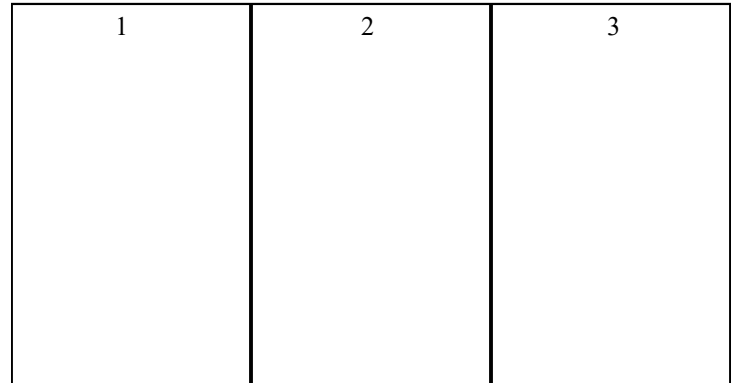


### STEP 2

INSTALL THE BAR'S 4 SUPPORTING RAILS AS SHOWN (T1, T2, B1, B2). USE 1.25" SCREWS AND INSTALL TO PREDRILLED LOCATIONS.

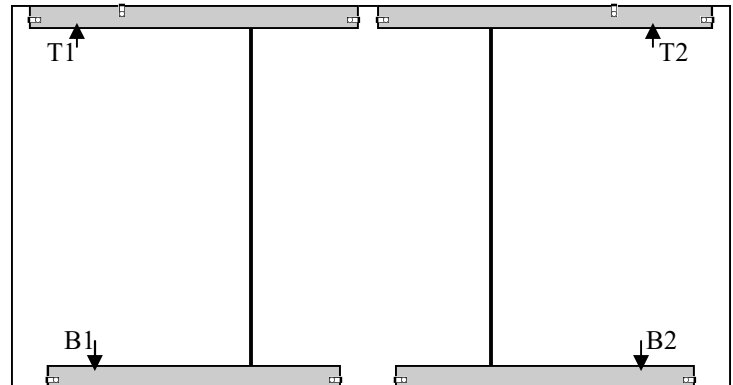


### STEP 3

INSTALL THE BAR'S 3 SUPPORTING PANELS (S1, S2, S3). USE 3/4" SCREWS AND INSTALL TO PREDRILLED LOCATIONS.

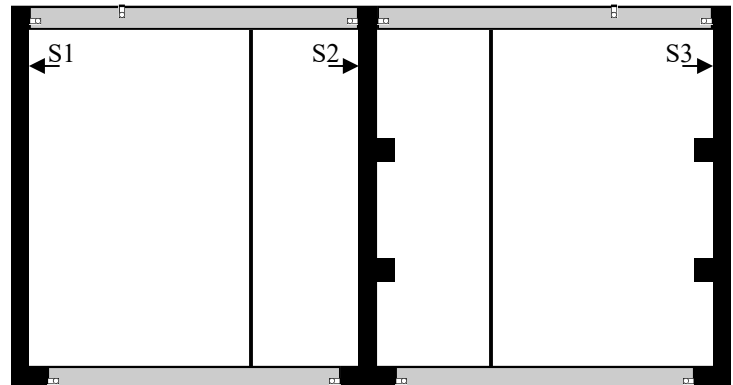

### STEP 4

STAND THE BAR UP, AND SLIDE IN THE PROVIDED SHELVES.

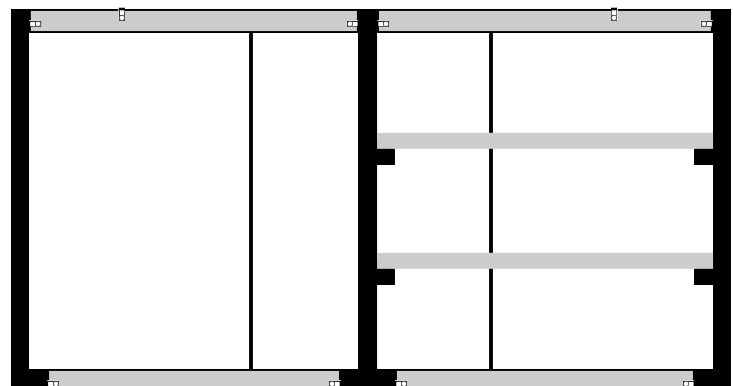


**SETUP INSTRUCTIONS FOR 60" TO 80" BAR**

**STEP 5**

INSTALL THE BAR TOP. USE 3/4" SCREWS AND INSTALL TO PREDRILLED LOCATIONS. USE CONNECTION POINTS ON PANEL S2 FIRST, BEFORE DOING THE BAR ENDS. USE THE PROVIDED MENDING PLATE TO SECURE THE 2 TOP SECTIONS TOGETHER AT THE FRONT CENTER OF THE BAR. BACK OF BAR TOP IS FLUSH WITH FRAME

BAR TOP (R)

BAR TOP (L)

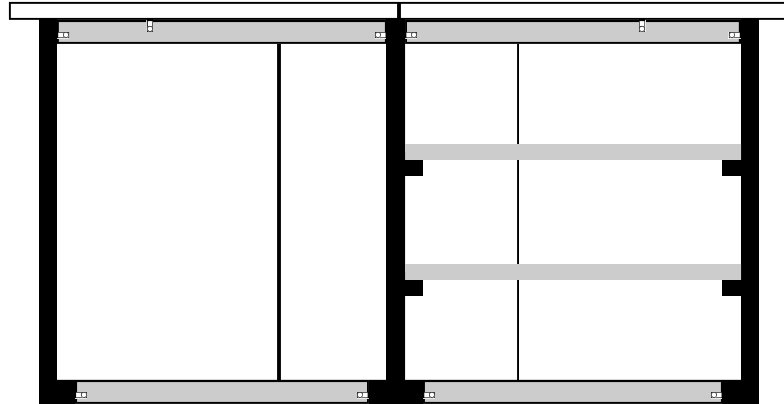

NOTES